
 
HANCOCK & MOORE

MOTION YOUR WAY 2

 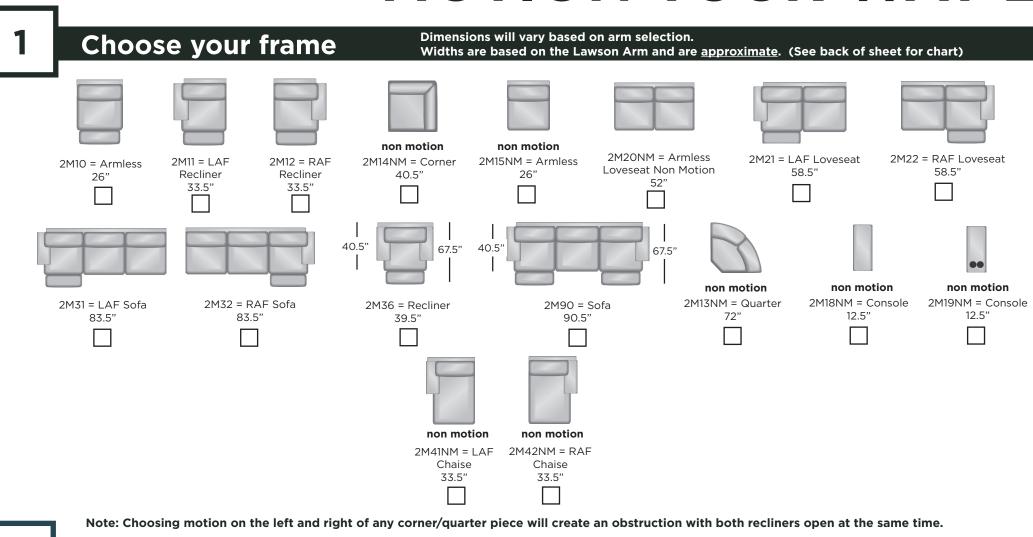


Choose your arm


There is no charge to omit nails on selections standard with nails. There is a charge to add nails to a selection standard without nails.



LA (Lawson Arm) 7" arm width *A nail standard



 
RT (Rising Track Arm) 4" arm width *No nails



ST (Scooped Track Arm) 4" arm width *No nails




 SA (Sundance Arm) 5.5" arm width *A nail standard




WT (Wide Track Arm) 6.5" arm width *No nails

 Only Available with Wide Track Foot




(Track Arm)
4" arm width
*No nails

 Choose your back



SB = Split Back

 


PB = Plain Back

Choose your base



T = Tapered Leg

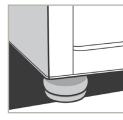

B = Bun foot



S = Small Block foot

042024



*W = Wide Track foot

Only Available with Wide Track Arm

5

Choose your power

Power Recliner

PRB
Power Recliner with Battery

Step 1 - Choose your frame (2M36 = recliner)	2M36	
Step 2 - Choose your arm (LA)	LA	
Step 3 - Choose your back (SB = Split Back)	SB	
Step 4 - Choose your base (T = Tapered Leg)	т	
Step 5 - Choose your power (PR = Power Recliner)	PR PR	٦

Ex. Style Number =

2M36 LA SB T PR

ALL STYLES IN THIS PROGRAM: 1. In addition to the regular reclin

- In addition to the regular reclining power, each style has a power articulating headrest and is only available with power.
- 2. Each style has a 4 button power switch with a home button with USB charger located on the inside of the arm.

**All lines below must be completed.

One sheet per item with the exception of sectionals.**

	one sheet per item with the exception of sectionals.
Store	
Email	
	Purchase Order #
Style #	
	*Nails
*Cushion Fill _	Quantity

^{*}See price list for options and related upcharges.

Overall Width by Frame with Arm Choice

Frame / Arm	LA	RT (Dising Typels Ayms)	SA (Sundanas Arm)	ST (Second Track Arms)	WT	TT (Two old A www)
	(Lawson Arm)	(Rising Track Arm)	(Sundance Arm)	(Scooped Track Arm)	(Wide Track Arm)	(Track Arm)
2M10 Armless	26"	26"	26"	26"	26"	26"
2M11 LAF Recliner	33.5"	31"	32"	31"	33.5"	31"
2M12 RAF Recliner	33.5"	31"	32"	31"	33.5"	31"
2M14 NM Corner	42.25"	42.25"	42.25"	42.25"	42.25"	42.25"
2M15 NM Armless	26"	26"	26"	26"	26"	26"
2M20NM Armless Loveseat	52"	52"	52"	52"	52"	52"
2M21 LAF Loveseat	58.5"	56"	57"	56"	58.5"	56"
2M22 RAF Loveseat	58.5"	56"	57"	56"	58.5"	56"
2M31 LAF Sofa	83.5"	81"	82"	81"	83.5"	81"
2M32 RAF Sofa	83.5"	81"	82"	81"	83.5"	81"
2M36 Recliner	39.5"	34"	36"	34"	39"	34"
2M41NM LAF Chaise	33.5"	31"	32"	31"	33.5"	31"
2M42NM RAF Chaise	33.5"	31"	32"	31"	33.5"	31"
2M90 Sofa	90.5"	85"	87"	85"	90"	85"



Power Switch

- Front two buttons adjust foot rest
 Back two buttons adjust head rest
- Center button is HomeFour button remote standard on armless pieces
- On a PRB, USB port will reduce the length of time the battery will hold a charge



Armless Recliner Remote